SPECIFICATION SHEET JFW MODEL 50PA-1253 PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Frequency Range 500-6000 MHz

Configuration 4 x 8 Handover Test System

(see block diagram 092-6344 for attenuator addressing)

(all ports are bi-directional)
(full fan-out configuration)

(the ADMIN password is located on rear panel)

Enclosure Type 19 inch rack mount @ 6RU high

Impedance 50 Ohms nominal

Attenuation Range 0-63.5 dB in 0.5 dB steps

Startup/Default States Maximum attenuation (see ATTEN command)

(configurable)

DHCP enabled (see NET command)

4 Ethernet users (see NET command)

Prompts off (see PROMPT command)

All of these default settings can be changed by user. Unit can be configured for up to 12 Ethernet users.

VSWR 1.8:1 maximum

< 1.6:1 typical (Inputs) < 1.5:1 typical (Outputs)

Insertion Loss 34 dB maximum 32 dB typical

Power Divider Isolation 20 dB minimum

Attenuation Accuracy \pm 0.50 dB 0.5-7.5 dB

 \pm 0.75 dB 8.0-15.5 dB \pm 1.00 dB or 3% 16.0-63.5 dB

(whichever is greater)
(guaranteed monotonic)

RF Input Power +33 dBm average (Input ports)

+30 dBm average (Output ports)

Switching Speed 4 microseconds typical

(after command is received and processed)
(3 milliseconds typical processing time)

Manual Control 20-Button Keypad and LCD display

(IP Address configurable via keypad) (Net mask configurable via keypad) (Gateway configurable via keypad) (Baud rate configurable via keypad)

Remote Control Ethernet (DHCP, TCP/IP, 10/100, up to 12 users)

RS-232 (up to 115200 Baud)

--CONTINUED--

Page 1 of 2 JFW FORM E-7-F REV F

SPECIFICATION SHEET JFW MODEL 50PA-1253 PROGRAMMABLE ATTENUATOR ASSEMBLY

JFW Industries, Inc. Phone: 317-887-1340 sales@jfwindustries.com www.jfwindustries.com

Remote Commands

Attenuator Control Commands:

Atten, Set Attenuator, Read Attenuator, Set All Attenuators, Read All Attenuators, Read All Extended, Fade Attenuator, Variable Attenuator Handover, Block, Set Block, Read Block, Read All Blocks, Fade Block, Variable Block Handover

System Commands:

Help, Identification, Store, Recall, Pause, Net, Serial, Close, Disconnect, MOTD, Date, Message, Restrict, IDENT, Name, Show Users, Reboot, Uptime,

Prompt

RF Connector

N or SMA female

AC Supply

100-240 VAC @ 47-63 Hz 2 Amp 5x20mm "Slo-Blo" AC fuse Littelfuse #215-002, JFW #025-021

Temperature Range

 $0^{\circ}C$ to $+50^{\circ}C$

Physical Size

See outline drawings: 092-8349 (N female)

092-10030 (N female front x8/ SMA female rear x4)

ECR/ECN	# DATE	REV	APPR / DATE	ECR/ECN # DATE	REV APPR / DATE
	11/07/2022		CLK 11/07/2022		
32393	02/08/2023	А	CLK 02/08/2023		

Page 2 of 2 JFW FORM E-7-F REV F